


AdLuminis LED Rückleuchten Set mit Funkübertragung

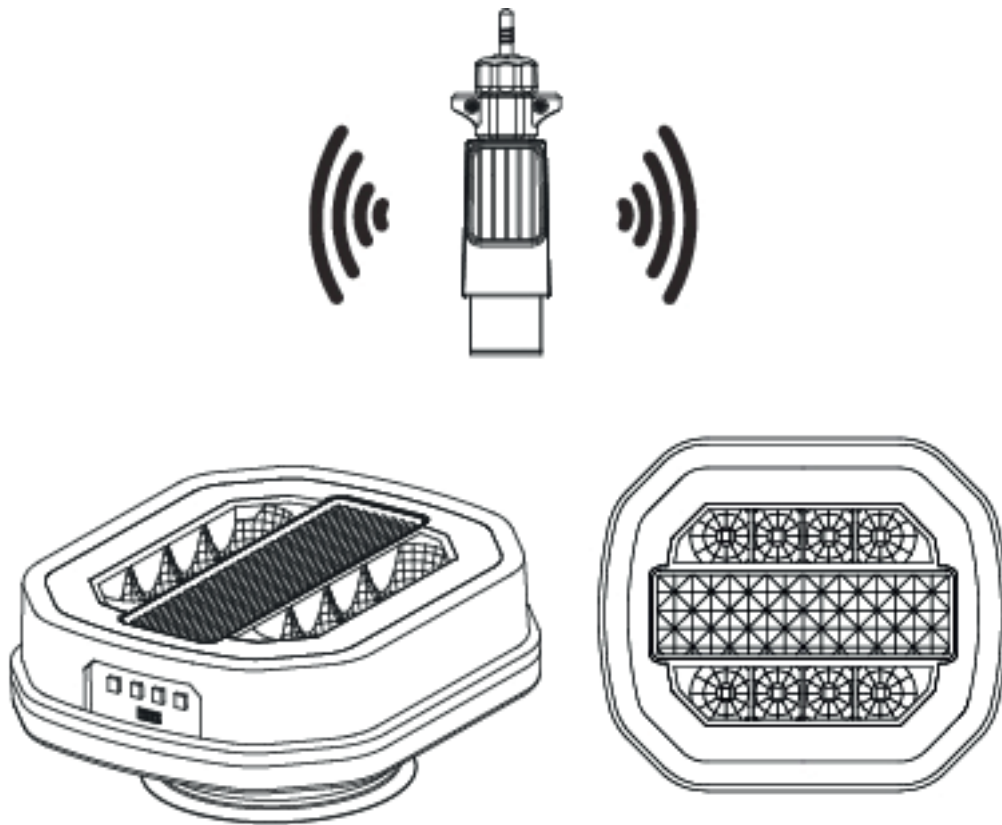

Warnung:

Schauen Sie während des Betriebs nicht direkt in die LEDs; dies kann zu Erblindung und/oder Augenschäden führen.

Berühren Sie die Lichter nicht, bis sie nach dem Betrieb abgekühlt sind.


Bitte überprüfen Sie den Batteriestatus, stellen Sie sicher, dass die Lichter vor der Verwendung voll aufgeladen sind.

Bitte prüfen Sie vor der Benutzung, ob alle Funktionen normal funktionieren.

Wenn die Lichter nicht in Gebrauch sind, überprüfen Sie bitte die Batterie alle 6 Monate.

Der Codeabgleich muss für die Ersatz- oder Zusatzleuchte durchgeführt werden.


Regelmäßige Überprüfung der Leuchten nach längerem Gebrauch.

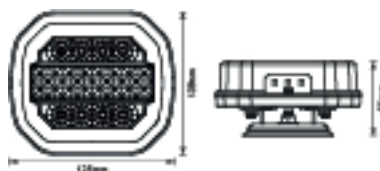


Spezifikationen:

Eingangsspannung:	DC 12V
Arbeitsfrequenz:	2.4G
Max. Kontrollabstand:	20 Meter
Akku-Typ:	3.7V/2200mA
Funktion:	4 Funktionen
Schutzklasse:	IP66
Arbeitstemperatur:	-10°C~50°C
Betriebszeit:	Fahren - 7 Stunden + 28 Minuten Bremslicht - 3 Stunden + 43 Minuten Fahrtrichtungsanzeiger - 11 Stunden + 29 Minuten
Zulassung/Zertifizierung:	ECE R10, ECE R3, ECE R4, ECE R6, ECE R7, CE, ROHS, UKCA

Lieferumfang:

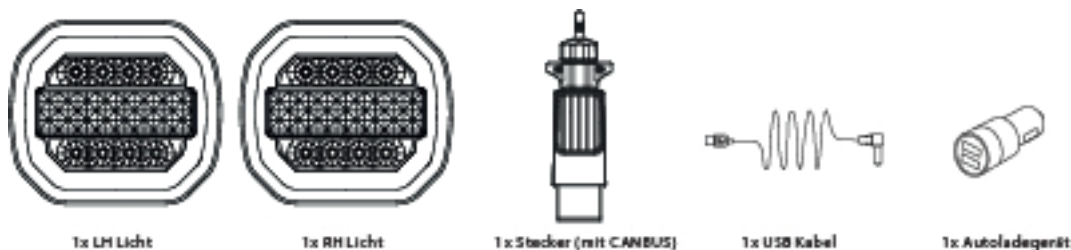

Benutzung:

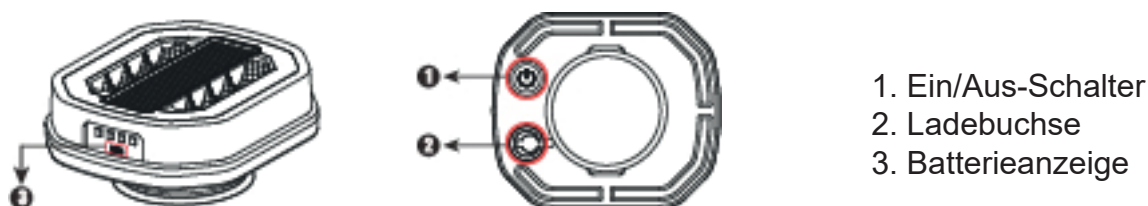

Batteriekontrolle:



ACHTUNG: Wenn das rote Licht der Anzeige blinkt, laden Sie bitte zu Ihrer Sicherheit das Licht auf!

Installationsanleitung:

1. Stecken Sie den Sender in die Buchse am Fahrzeug




2. Schalten Sie das rechte und linke Licht ein



3. Starten Sie den Motor



4. Prüfung

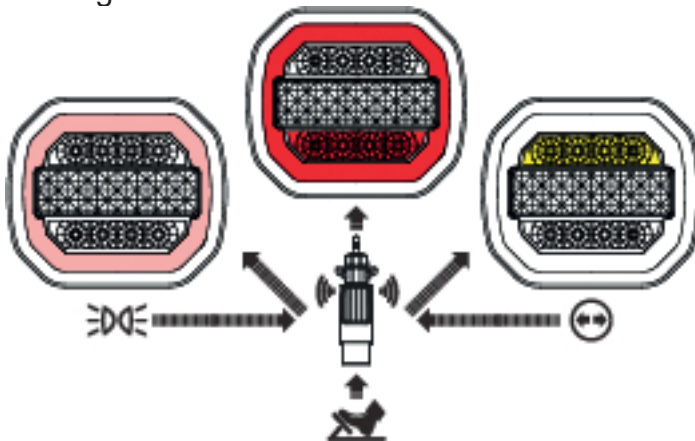

5. Montieren Sie die rechte und linke Leuchte auf der Metalloberfläche des Fahrzeugs

Hinweis



Wenn Sie eine einzelne Leuchte des Original-Satzes durch eine neue ersetzen möchten, ist ein Code-Abgleich erforderlich, siehe „Code-Abgleich“ im nächsten Kapitel

Code Abgleich:

1. Stellen Sie sicher, dass der Sender bereits erfolgreich installiert wurde und normal funktioniert.
2. Starten Sie den Motor, dann schalten Sie das Rücklicht (Blinker, Rücklicht, Bremslicht, jedes Licht ist geeignet für Code-Matching)




3. Aktivieren Sie das ersetzende Licht

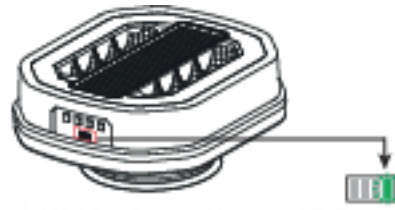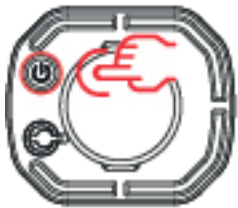

Wenn das Licht blinkt, ist es erfolgreich aktiviert


4. Den Code abgleichen

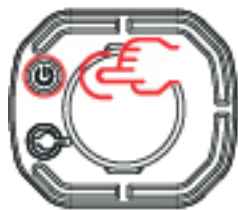

Abgleich in Bearbeitung →

Abgleich abgeschlossen →

5. Prüfen

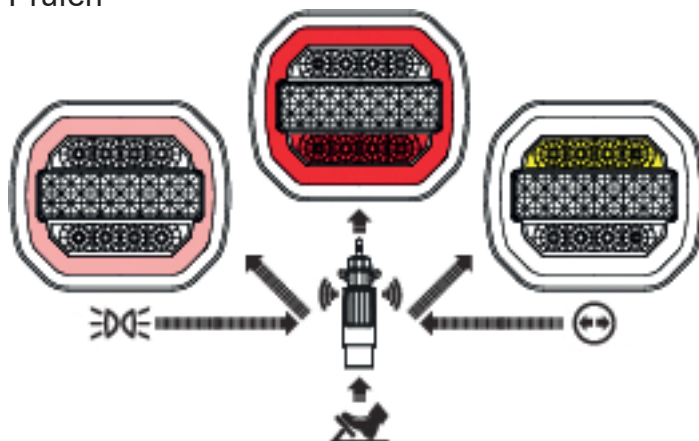

Importeur:



FK Söhnchen GmbH & Co. KG
Im Dahl 1 - 58579 Schalksmühle


Hersteller:



ABC Onlinevertrieb GmbH
Loh 2 - 58339 Breckerfeld

Item No.: 322900

AdLuminis LED Trailer Light Wireless

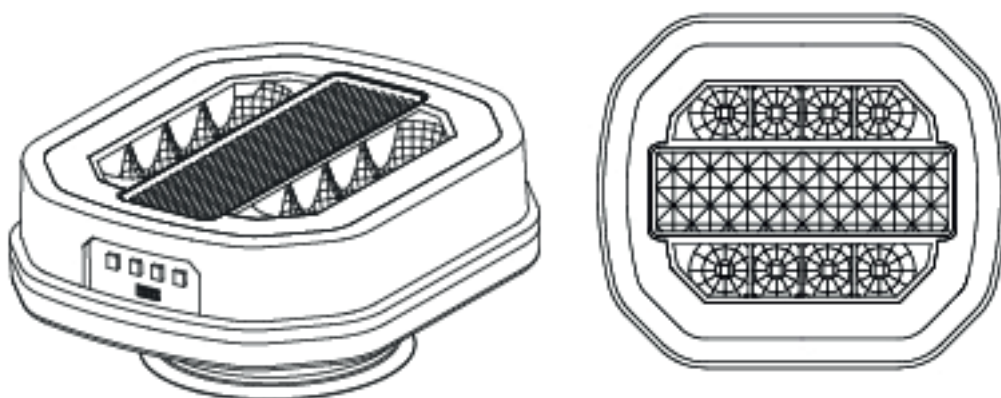

Warnung:

Do not look directly into LEDs while in operation; may cause momentary blindness and/or eye damage.

Do not touch lights until they cool down after working


Please check the battery status, ensure the lights are fully charged before using

Please check each function works normally before using

If the lights are not in use, please check the battery every 6 months

The code matching process must be imposed on the replacement light or additional light


Regularly check the lights after long-time using.

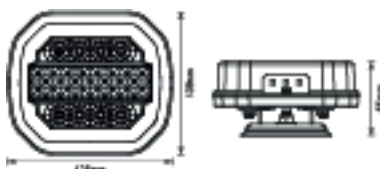


Specification:

Inout Voltage:	DC 12V
Working Frequency:	2.4G
Max. Control Distance:	20 Meters
Battery Type:	3.7V/2200mA
Function:	4 Functions
Waterproof:	IP66
Working Temperature:	-10°C~50°C
Working Time:	Driving - 7 Hours + 28 Minutes Brake light -3 Hours + 43 Minutes Direction Indicator -11 Hours + 29 Minutes
Certificates:	ECE R10, ECE R3, ECE R4, ECE R6, ECE R7, CE, ROHS, UKCA

Kits Including:

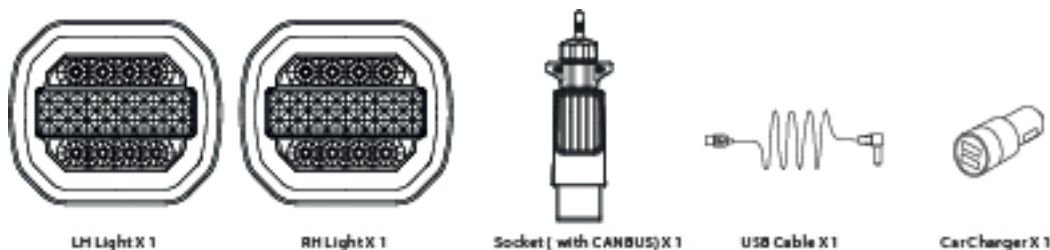

Instruction of Light:

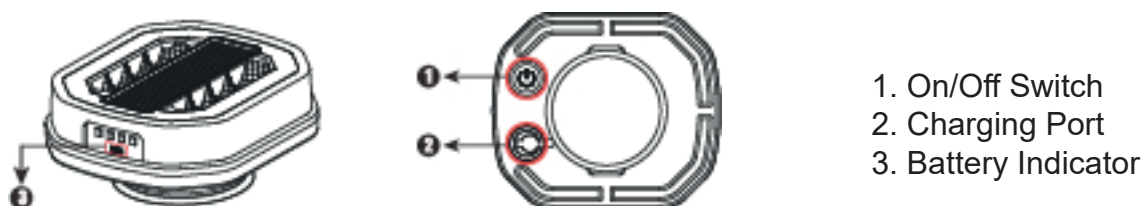

Battery Checking:



ACHTUNG: When the red light of the indicator is flashing, for your safety, please charge the light.

Installation Guidance:


1. Plug the transmitter into the Socket on the vehicles




2. Turn on the RH & LH light



3. Start the engine

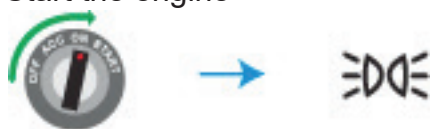

4. Testing

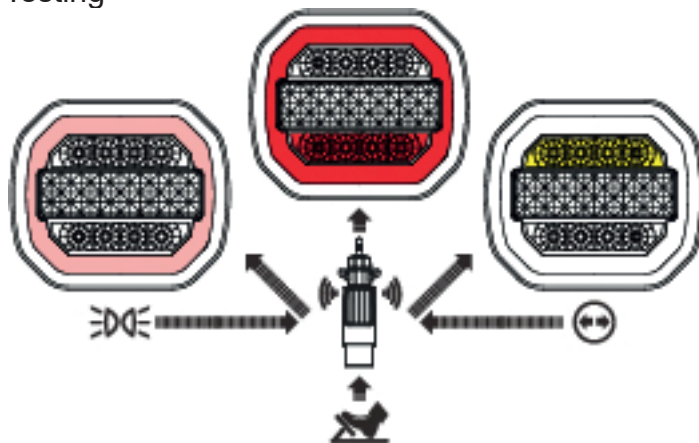

5. Mount the RH & LH light on the metal surface of vehicles

Notice


If you want to replace one single light of the original set by a new light, the code matching process is necessary, please refer to the "code matching process" in the appendix in this brochure.

Code Matching Process:


1. Make sure the transmitter already been installed successfully and work normally.
2. Start the engine, Then turn on the tail light(turn light, tail light, brake light , any light is suitable for code matching




3. Activate the replacing light

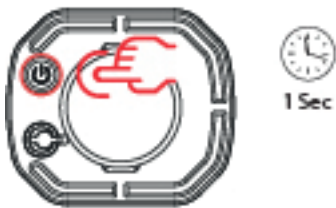

4. Code Matching

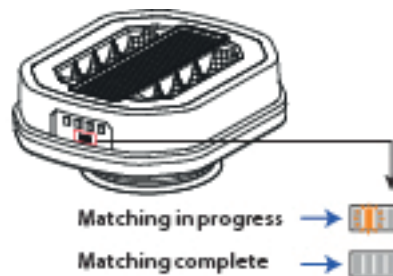

5. Testing

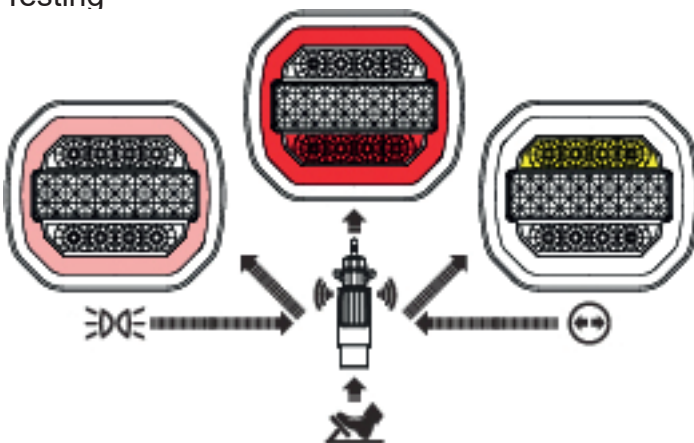

Importer:



FK Söhnchen GmbH & Co. KG
Im Dahl 1 - 58579 Schalksmühle

Manufacturer:



ABC Onlinevertrieb GmbH
Loh 2 - 58339 Breckerfeld