

Blurea Kurbelpumpe für Fassanbau 2“Gewinde


Diese Bedienungsanleitung enthält wichtige Informationen!

Wichtige Hinweise:

Chemische Fasspumpen dürfen NUR mit Benzin, Diesel, Motoröl, Wasser, Säure, Lauge, Ad-blue, Alkohol, Toluol, Harnsäure usw. verwendet werden. Verwenden Sie diese Pumpe NICHT mit Fett, Klebstoff oder anderen hochviskosen Flüssigkeiten und Feststoffen, die das Laufrad und die Schaufel sowie das Pumpengehäuse beschädigen.

Die Kurbel-Fasspumpe ist eine handbetriebene, selbstansaugende Pumpe zum Fördern von Flüssigkeiten (z. B. Benzin, Diesel, Motoröl, Wasser, Säure, Lauge, Adblue, Alkohol, Toluol, Harnsäure usw.) aus Fässern mit 2“NPT-Spund mit einer Geschwindigkeit von 10 Gallonen pro Minute.

Verweis	Bezeichnung	Menge
A	Ausgangsrohr	1
B	Drehbares Pumpengehäuse	1
C	Spund-Adapter	1
D	Pumpeneingang Standrohr	1
E	Standrohre	2
F	Filtersieb	1

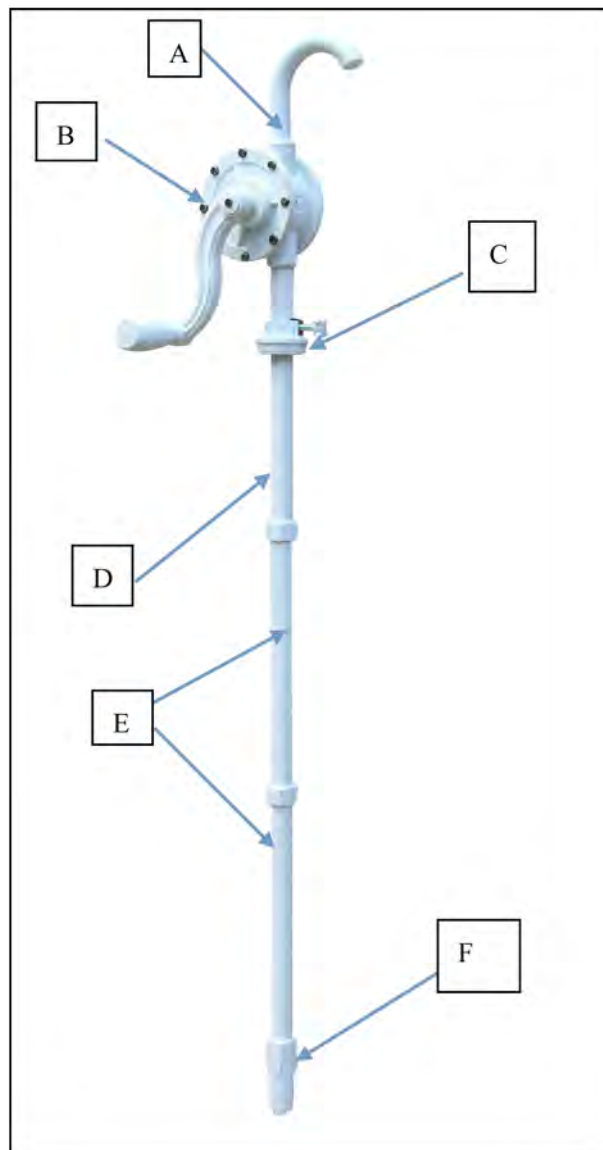

Spezifikationen:

Maximale Durchflussmenge	Ca. 15 l/min
Entlüftung	Selbstentlüftung
Maximale Standrohrlänge	40“
Durchmesser des Spundadapters	2“NPT
Pumpengehäuse	PP
Laufrad	PP
Schaufel	PPS
Dichtung	Viton
Schrauben und Muttern	304SS

Montage:

1. Schrauben Sie das Schwanenhalsrohr in das obere Ende der Pumpenbaugruppe.

Hinweis: Die Gewinde an den Rohrsegmenten sind so ausgelegt, dass sie eine ausreichende Dichtung bilden, wenn sie von Hand angezogen werden. Ein zu starkes Anziehen kann die Gewinde beschädigen.

2. Schrauben Sie das Pumpeneingangsrohr in den Boden der Pumpenbaugruppe und schieben Sie dann den zweiteiligen Spundadapter auf das Standrohr. schieben Sie dann den zweiteiligen Spundadapter so auf das Standrohr, dass sein Gewinde nach unten zeigt.
3. Schrauben Sie die beiden verbleibenden Standrohre zusammen und schrauben Sie sie dann auf das Eingangsstandrohr.
4. Montieren Sie das Filtersieb an der Unterseite des montierten Standrohrs.
5. Optional kann der dehnbare Ausgangs-Flex-Schlauch über das Ende des Schwanenhalsrohrs montiert werden.

Inbetriebnahme:

1. Stecken Sie das Standrohr in den Spund des Fasses, dann schrauben Sie das Unterteil des Spundadapters auf den Spund. Nur handfest anziehen.
2. Schieben Sie den oberen Teil des Spundadapters nach unten über den unteren Teil und ziehen Sie ihn handfest an, um die Standrohre zu sichern.
3. Wenn Sie bereit sind zu pumpen, drehen Sie den Griff im Uhrzeigersinn, um den Flüssigkeitsstrom zu starten.

Wartung und Lagerung:

Wischen Sie die Außenflächen der Pumpe nach dem Gebrauch trocken und lagern Sie sie an einem gut belüfteten und geschützten Ort.

Im Inneren des Pumpengehäuses befinden sich keine zu wartenden Teile.

Importeur:



FK Söhnchen GmbH & Co. KG
Im Dahl 1 - 58579 Schalksmühle

Hersteller:



ABC Onlinevertrieb GmbH
Loh 2 - 58339 Breckerfeld

Chemical Drum Pumps Installation Manual



CAUTION

Chemical drum pumps is designed to be used ONLY with gasoline, diesel, engine oil, water, acid, alkali, the adblue, alcohol, toluene, Uric acid and so on. DO NOT use this pump with grease, glue or any other high viscosity of the liquid and solid that will damage the impeller and vane and the pump body.

Chemical drum pump is a hand -operated, self-priming pump designed to move fluids (such as gasoline, diesel, engine oil, water, acid, alkali, the adblue, alcohol, toluene, Uric acid and so on) from barrels with 2"NPT bung at a rate of 10 gallons per minute.

Use the information in Figures 1-2 to inventory your shipment.

Ref	Description	Qty
A	Output Pipe	1
B	Rotary pump body	1
C	Bung adapter	1
D	Pump input standpipe	1
E	Standpipes	2
F	Filter Screen	1

Specifications:

Maximum Rate of Flow10Gal/Min
Priming.....Self-Priming
Maximum Standpipe Length.....40"
Bung Adapter Diameter.....2"NPT
Pump BodyPP
Impeller.....PP
Vane.....PPS
Seal.....Viton
Screws and nuts.....304SS

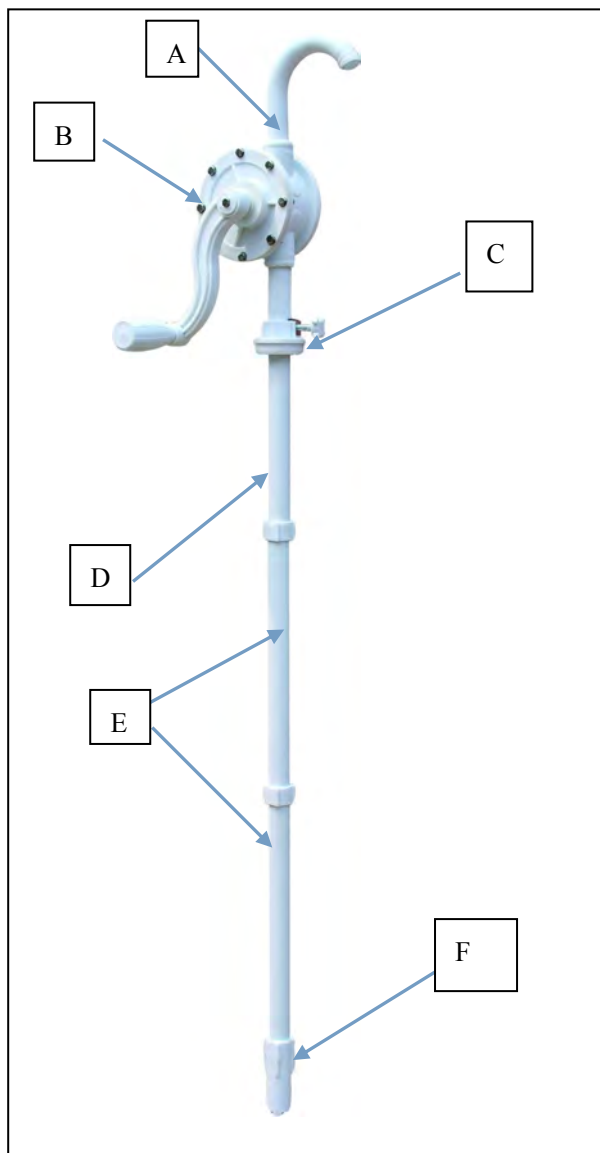


Figure 2. Chemical drum pump

Assembly

1. Thread the gooseneck pipe into the top of the pump assembly.

Note: The threads on the pipe segments are designed to form an adequate seal when tightened by hand. Over-tightening may damage the threads.

2. Thread the pump input standpipe into the bottom of the pump assembly, then slide the two-part bung adapter onto the standpipe so that its threads are facing down.

3. Thread the remaining two standpipes together, then thread them onto the input standpipe.

4. Install the filter screen onto the bottom of the assembled standpipe.

5. Optionally, fit the expandable output flex-hose over the end of the gooseneck pipe.

Operation

1. Insert the standpipe into the bung of the barrel, then thread the lower part of the bung adapter onto the bung—hand tighten only.

2. Slide the top part of the bung adapter down over the top of the lower part and hand-tighten it to secure the standpipes in place.

3. When ready to pump, rotate the handle clockwise to begin the flow of fluid.

Maintenance & storage

After use, wipe the outside surfaces of the pump assembly dry, then store it in a well-ventilated protected area.

There are no serviceable parts inside the pump housing.

Importer:



FK Söhnchen GmbH & Co. KG
Im Dahl 1 - 58579 Schalksmühle

Manufacturer:



ABC Onlinevertrieb GmbH
Loh 2 - 58339 Breckerfeld