


OPERATION MANUAL

FS-30



PLEASE READ THIS MANUAL CAREFULLY BEFORE USING

I Operation Instruction

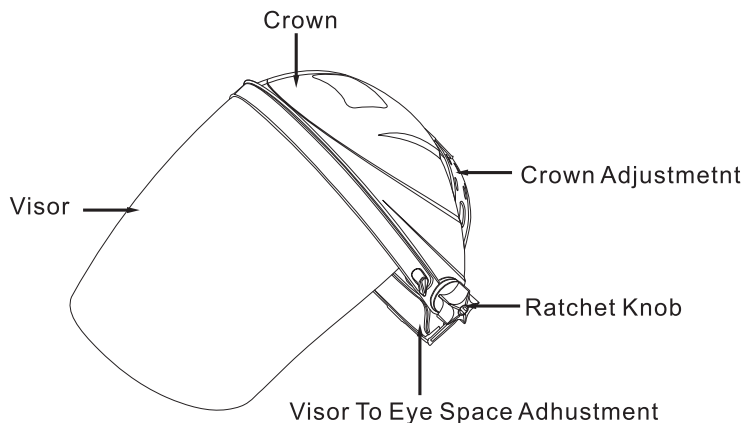

1. Easy-assembling design makes visor assembling easier and quicker.
2. Superior anti-chemical function, prevent liquid splash effectively.
3. High impact resistant, for effective splash block.
4. Crown adjustment easy to adjust headgear size.
5. Sweatband to absorb sweat effectively and comfortable to use.
6. Ratchet knob at the back of head to fix head accurately, turn left or right to desired comfort level.
7. Five tilts level to adjust space and angle of visor to eye, adapt to work in different environment.
8. Plenty inner space for wearing glasses.
9. UP-down flexible visor design, support with joint, prevent loosening or drooping.
10. Wider viewing area and high light transmittance.
11. This model with color choice of Orange, Blue, Yellow, Black.

II OPERATION INSTRUCTIONS

1. Please adjust and wear face shield according to the operation instruction.
2. Wear this face shield when certain extent harm to eyes or face in work.
3. Check the function of the face shield regularly.
4. To clean and sterilize the window visor, warm sudsy water is available, do not put the whole face shield into the water.
5. Keep the face shield in dry and cool place (under +55°C) when not in use.
6. The picture is for reference, please adhere to the actual product.
7. The final power of interpretation owes to our company.

III SPECIFICATION

1. Visor material:PC,thick:2 mm.
2. Crown shield material:ABS.

IV OPERATING ENVIRONMENT

- 1.Grading in welding
- 2.Dealing with Welding slag
- 3.Cutting metal
- 4.Spraying chemicals
- 5.Splashing hot oil in fried cooking

V DECLARATION

The protective function of the face shield will be badly damaged if the user neglect the aboved suggestions. As a result, it may cause a series of negtive effects. Our company will not be responsible for this case.

VI WARNING

All the protective measurements only afford a limited protection to eyes and face. The user should choose, operate, check and maintain the products properly. It may cause a badly damage for mischoosing(like insufficient protects or overprotected) ,misoperating or laking maintenance. Please consult our company or local agent if there is any problem of the product.

VII LIMITED WARRANTY

Our quality assurance for the product is 1 year against defects in material and workmanship under nomal use. It is not included the damage caused by misoperating, abusing or modifying the products without authorizing.